Walltron Stylfix Tile Grout is a cement-based single component polymer modified non-shrink tile grout for filling tile joints up to 4mm width. It has water repellency properties, excellent adhesion and good workability.

#### **GREEN ASSURED**











### **PRODUCT FEATURES**



Easy to Use



**Water Resistant** 



**Excellent Adhesion** 




Non Shrink



Resistant to Normal Toilet Cleaners



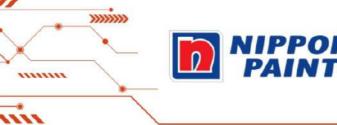

# NIPPON STYLFIX-TILE GROUTS Polymer Modified Cement based Grout



#### **TECHNICAL DETAILS**

Appearance	Free-flowing grey powder	
Pot life	30 min	

### Coverage:



#### WALLTRON STYLFIX TILE GROUTS

Approximate coverage per 1 kg of grout

Tile Size x Thickness	Jo		
In mm	1mm	2 mm	3 mm
100 x 100 x 3	1430	720	480
150 x 150 x 4	1610	810	540
200 x 150 x 5	1470	740	490
150 x 300 x 6	2150	716	710
300 x 300 x 6	2150	716	710
450 x 300 x 7	2205	1104	737
600 x 450 x8	2755	1379	920
600 x 600 x8	3210	1610	1070
600 x 900 x 11	2804	1406	1070
900 x 900 x 12	3213	1608	1072

Add 5-7% wastage in consumption mentioned above.

### **HOW TO APPLY**

## **Surface Preparation:**



Surface must be clean, free from contamination and cured Tile Adhesive. Remove dust using a wire brush or air blower.

### Precautions:

- · Always add Tile Grout to water and not water to the Tile Grout.
- · Do not mix excess water.
- Stylfix Tile Grout is not recommended in areas where high chemical resistance is required or in industrial environment.
- · Use the mix within 30 minutes.

## Application:

- · Before grouting make sure that adhesive is cured and the tiles are firmly fixed.
- · For exterior application, wet the tiles prior to applying Stylfix Tile Grout.
- Tile joints must be dean & free of oil or any other foreign matter.
- Add 1 Kg tile grout to about 320 to 350 ml of potable water & mix till it is free from lumps.
- Dampen the surface. Spread the grout using spatula or putty blade ensuring that no air gaps are left in the joint.
- Apply the material within 30 minutes of mixing. If it become too stiff to work, it should be discarded.
- Remove surplus grout.
- Allow to harden for 2-3 hours and then remove excess material with damp sponge.
- Allow the joint to cure for 24 hrs before subjecting it to normal service conditions. In case of exterior joints, protect from direct sunlight/ rains for at least 24 hours.

#### SAFETY AND ENVIRONMENT

Always work in a well-ventilated area. Wear appropriate attire, especially gloves, eye protection and mask. Avoid contact with skin as it may cause irritation.

Clean the tiles with damp sponge/cloth immediately after grout is cured. Hot water and mild soap is the best for cleaning. Wash all tools with clean water immediately after application.

In case of eye contact rinse immediately with water and seek immediate medical treatment. To remove Putty from skin, use soap and water or appropriate cleanser. In the event of spillage, contain and collect split putty by using sand or earth.

Store Tile Grout in a cool dry and well ventilated place away from heat sources, flammables or direct sun light. Keep the loose bags with mouth tied tightly with string after taking the material to prevent lump formation. Do not store near food, drinks or animal feed. Keep out of reach of children. Safety datasheets will be made available to professional users upon request

Best before 6 months from date of manufacturing in unopened original packing when stored in dry condition.

